
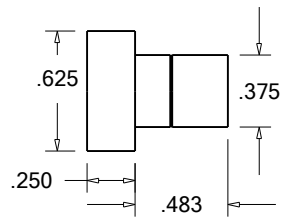
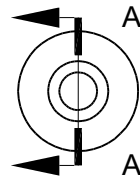


Grease Groove Make 2 or 3  
each .008 deep.

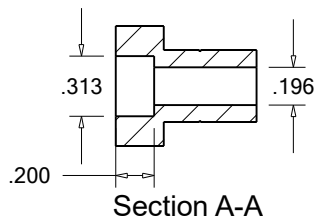

Length of shoulder is .003"  
longer than the swingarm thickness.